NBS-08 DIP SWITCH SETTINGS

TABLE OF (5 .6=
DIP SWITCH SELECTIONS:	SECTION:	PAGE:
TABLE OF CONTENTS		1-2
NORMAL RUN DIP SWITCHES	Normal Run Dip Switches	3
TWIN ENGINE QUICK CONFIGURATION MODE	Quick Configuration	4
SINGLE ENGINE QUICK CONFIGURATION MODE	Quick Configuration	4
ACTUATOR CALIBRATION MODE	Actuator Calibration	5
CS CUSTOM OPTIONS MODE	CS Custom Options	6
SELECTING STATION COUNT	CS Custom Options	6
SELECTING STD / PLUG-IN HANDLE	CS Custom Options	6
GEAR CUSTOM OPTIONS MODE	Gear Custom Options	7
SELECTING GEAR CABLE DIRECTION	Gear Custom Options	7
SELECTING GEAR DELAY	Gear Custom Options	7
SELECTING NEUTRAL DELAY	Gear Custom Options	7
THROTTLE CUSTOM OPTIONS MODE	Throttle Custom Options	8
SELECTING THROTTLE CABLE DIRECTION	Throttle Custom Options	8
SELECTING THROTTLE DELAY	Throttle Custom Options	8
SELECTING LEAD SYNC ENGINE	Throttle Custom Options	8
TROLL CUSTOM OPTIONS MODE	Troll Custom Options	9
SELECTING TROLL / NO TROLL	Troll Custom Options	9
SELECTING TROLL CABLE DIRECTION	Troll Custom Options	9
SELECTING THROTTLE ON TOP OF TROLL	Troll Custom Options	9
SELECTING GEAR TO TROLL DELAY	Troll Custom Options	9
SELECTING TROLL TO GEAR DELAY	Troll Custom Options	9
SELECTING TROLL TO THROTTLE DELAY	Troll Custom Options	10
SELECTING THROTTLE TO TROLL DELAY	Troll Custom Options	10
OTHER CUSTOM OPTIONS MODES	Other Custom Options	11
SELECTING THROTTLE / TROLL BUMP COUNT	Other Custom Options	11
SELECTING THROTTLE / TROLL BUMP SIZE	Other Custom Options	11
SELECTING HI IDLE STEP SIZE	Other Custom Options	12
SELECTING STARTUP OPTIONS	Other Custom Options	13

NICLAS MATTSSON nbs08 dips 4-12-04A

MODE SELECTION:	SECTION:	PAGE:
CP TROUBLE SHOOT MODE	CP Trouble shoot	14
TROUBLE SHOOT 16 MOST RECENT ALARMS	CP Trouble shoot	14
TROUBLE SHOOT SPECIFIC ALARM COUNT	CP Trouble shoot	14
HANDLE TROUBLE SHOOT MODE	Handle Trouble shoot	15
TROUBLE SHOOT 16 MOST RECENT ALARMS	Handle Trouble shoot	15

NICLAS MATTSSON nbs08 dips 4-12-04A

DIP SWITCH FUNCTION	DIP SWITCH FUNCTIONS IN NORMAL RUN (AT STARTUP):										
		DIP S1									
DISABLE DIAGNOSTICS SECTION:	1	2	3	4	5	6	7	8			
DISABLE ACTUATOR DIAGNOSTICS	OFF	OFF	OFF	OFF	ON						
DISABLE CS DIAGNOSTICS	OFF	OFF	OFF	OFF		ON					
DISABLE ANALOG DIAGNOSTICS	OFF	OFF	OFF	OFF			ON				
DISABLE SOLENOID DIAGNOSTICS	OFF	OFF	OFF	OFF				ON			
ENTER ACTUATOR CALIBRATE MODE	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF			
		DIP S2									
SYNC GAINS:	1	2	3	4	5	6	7	8			
GAIN FOR < 20 RPM DIFFERENTIAL		ON									
GAIN FOR < 100 RPM DIFFERENTIAL				ON							
GAIN FOR > 100 RPM DIFFERENTIAL						ON					
DEFAULT SYNC GAIN: 2, 4, 6 ON.											
		DIP S2									
DISPLAY ACTIVE STATION COM ERROR CNT:	1	2	3	4	5	6	7	8			
DON'T DISPLAY COM ERRORS								OFF			
DISPLAY COM ERRORS								ON			

DIP SWITCH FUNCTIONS IN TWIN	I / SING	LE ENG	INE QU	ICK CO	NFIGUE	RATION	MODE:	
		DIP S1						
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8
QUICK CONFIGURATION	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
		DIP S2						
TWIN / SINGLE ENGINE QUICK CONFIG SETTINGS:	1	2	3	4	5	6	7	8
1 CS	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
2 CS	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
3 CS	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
PORT GEAR PUSH TO AHEAD			OFF	OFF	OFF	OFF	OFF	OFF
PORT GEAR PULL TO AHEAD	ON OFF OFF OFF							
STBD GEAR PUSH TO AHEAD	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
STBD GEAR PULL TO AHEAD	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
PORT/STBD THROTTLE PUSH TO OPEN					OFF	OFF	OFF	OFF
PORT/STBD THROTTLE PULL TO OPEN					ON	OFF	OFF	OFF
TURN ON SW 8 ON S2 UNTI	L ALL LED	s ARE LIT	TO STORI	E SETTING	<u> </u>			S
NOTE: ALL CUSTOM SETTINGS WILL REVERT TO DEFA	III T CETT	INGS WHE	N ENTEDI	NG OHICK	CONFIGI		10DEIII	
DEFAULT VALUES						NATION I	MODE:::	
CS DEFAULTS:					ON (NO HA	AND-HELD)	
THROTTLE DEFAULTS:					THROTTL		<u>) · </u>	
GEAR DEFAULTS:		_			GEAR DEI			
TROLL DEFAULTS:					L TROLL D		SEC.	
THROTTLE / TROLL BUMP DEFAULTS:	20 BUMPS	S / SIZE 10	(about 1%	of throttle/t	roll range).			
HI IDLE DEFAULTS:			of throttle r		<u> </u>			
NEUTRAL DELAY DEFAULTS:	0 SEC.	,		<u> </u>				
LEAD SYNC ENGINE:	STBD							
STARTUP CONFIGURATION:	STARTUP	IN WARM						

DIP SWITCH FUNCTIONS IN ACTUATOR CALIBRATION MODE:											
		DIP S1									
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
ACTUATOR CALIBRATION	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF			
DIP S2											
ACTUATOR CALIBRATION SELECTION	1	2	3	4	5	6	7	8			
CALIBRATE ALL ACTUATORS IN SEQUENCE	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF			
CALIBRATE PORT THROTTLE ONLY	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF			
CALIBRATE STBD THROTTLE ONLY	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF			
CALIBRATE PORT GEAR ONLY	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF			
CALIBRATE STBD GEAR ONLY	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF			
CALIBRATE PORT TROLL ONLY	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF			
CALIBRATE STBD TROLL ONLY	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF			

DIP SWITCH FUNCTIONS IN CS CUSTOM OPTIONS MODE:											
		DIP S				<u> </u>					
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
CONTROL STATIONS	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF			
		DIP S	2								
CS OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
SET STATION COUNT	OFF	OFF	OFF	OFF							
1 CS	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF			
2 CSs	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF			
3 CSs	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF			
4 CSs	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF			
5 CSs	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF			
6 CSs	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF			
TURN ON SW 8 ON S2 UNTIL ALL LEDs ARE LIT TO ACTIVATE SETTING!!											
NOTE: FOR ALL THE FOLLOWIN	IG CS CONFIC	GURATION	IS, DIP S1:	6-8 SELE	CTS CS TC	BE CONF	IGURED!				
		DIP S	1								
	1	2	_		5		1				
			3	4	Э	6	7	8			
CS TO BE CONFIGURED:	ON	ON	OFF	OFF	OFF	6	7	8			
CS TO BE CONFIGURED:	-		-	•	_	ON ON	7 OFF	8 OFF			
	ON	ON	OFF	OFF	OFF						
CS1	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON	OFF	OFF			
CS1 CS2	ON ON ON	ON ON ON	OFF OFF	OFF OFF	OFF OFF	ON OFF	OFF ON	OFF OFF			
CS1 CS2 CS3	ON ON ON ON	ON ON ON	OFF OFF OFF	OFF OFF OFF	OFF OFF OFF	ON OFF ON	OFF ON ON	OFF OFF			
CS1 CS2 CS3 CS4	ON ON ON ON	ON ON ON ON	OFF OFF OFF OFF	OFF OFF OFF OFF	OFF OFF OFF OFF	ON OFF ON OFF	OFF ON ON OFF	OFF OFF OFF			
CS1 CS2 CS3 CS4	ON ON ON ON ON	ON ON ON ON ON	OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF	OFF OFF OFF OFF	ON OFF ON OFF ON	OFF ON OFF OFF	OFF OFF ON ON			
CS1 CS2 CS3 CS4	ON ON ON ON ON	ON ON ON ON ON ON	OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF	OFF OFF OFF OFF	ON OFF ON OFF ON	OFF ON OFF OFF	OFF OFF ON ON			
CS1 CS2 CS3 CS4 CS5	ON ON ON ON ON ON	ON DIP S2	OFF OFF OFF OFF OFF	OFF OFF OFF OFF	OFF OFF OFF OFF OFF	ON OFF ON OFF ON OFF	OFF ON ON OFF OFF	OFF OFF ON ON			
CS1 CS2 CS3 CS4 CS5 CS6 CS OPTION TO CUSTOMIZE:	ON ON ON ON ON ON	ON ON ON ON ON ON ON DIP S2	OFF OFF OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF	ON OFF ON OFF ON OFF	OFF ON ON OFF OFF	OFF OFF ON ON			
CS1 CS2 CS3 CS4 CS5 CS6 CS OPTION TO CUSTOMIZE: SELECT STD/PLUG-IN CONNECTION	ON ON ON ON ON ON ON	ON ON ON ON ON ON ON ON ON DIP S2 ON	OFF OFF OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF OFF	OFF OFF OFF OFF OFF OFF	ON OFF ON OFF ON OFF	OFF ON OFF OFF ON 7	OFF OFF ON ON ON			

DIP SWITCH FUNC	TIONS	IN GEA	R CUST	гом ор	TIONS	MODE:				
		DIP S								
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
GEAR SETTINGS:	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF		
		DIP S	2							
GEAR OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SELECT GEAR CABLE DIRECTIONS	OFF	OFF	OFF							
PORT PUSH TO AHEAD	OFF	OFF	OFF	OFF		OFF	OFF	OFF		
PORT PULL TO AHEAD	OFF	OFF	OFF	ON		OFF	OFF	OFF		
STBD PUSH TO AHEAD	OFF	OFF	OFF		OFF	OFF	OFF	OFF		
STBD PULL TO AHEAD	OFF	OFF	OFF		ON	OFF	OFF	OFF		
TURN ON SW 8 ON S2 UN	TIL ALL I	EDs ARE	LIT TO AC	TIVATE SI	ETTING!!		1	S		
DIP S2										
GEAR OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SELECT GEAR DELAY	ON	OFF	OFF							
NO GEAR DELAY	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF		
GEAR DELAY 1.0 SEC	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF		
GEAR DELAY 2.0 SEC	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF		
GEAR DELAY 3.0 SEC	ON	OFF	OFF	ON	ON	OFF	OFF	OFF		
GEAR DELAY 4.0 SEC	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF		
GEAR DELAY 6.0 SEC	ON	OFF	OFF	ON	OFF	ON	OFF	OFF		
GEAR DELAY 8.0 SEC	ON	OFF	OFF	OFF	ON	ON	OFF	OFF		
GEAR DELAY 10.0 SEC	ON	OFF	OFF	ON	ON	ON	OFF	OFF		
TURN ON SW 8 ON S2 UN	ITIL ALL I	EDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S		
		DIP S	1							
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
GEAR SETTINGS:	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF		
		DIP S	2							
GEAR OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SELECT NEUTRAL DELAY	OFF	ON	OFF							
NO NEUTRAL DELAY	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF		
NEUTRAL DELAY 0.5 SEC	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF		
NEUTRAL DELAY 1.0 SEC	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF		
NEUTRAL DELAY 1.5 SEC	OFF	ON	OFF	ON	ON	OFF	OFF	OFF		
NEUTRAL DELAY 2.0 SEC	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF		
NEUTRAL DELAY 2.5 SEC	OFF	ON	OFF	ON	OFF	ON	OFF	OFF		
NEUTRAL DELAY 3.0 SEC	OFF	ON	OFF	OFF	ON	ON	OFF	OFF		
TURN ON SW 8 ON S2 UN	NTIL ALL I	EDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S		

DIP SWITCH FUNCTI	ONS IN	THROT	TLE CL	JSTOM (OPTION	IS MOD	E:			
		DIP S	1							
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
THROTTLE SETTINGS:	ON	ON	ON	OFF	OFF	OFF	OFF	OFF		
DIP S2										
THROTTLE SETTING TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SELECT THROTTLE CABLE DIRECTIONS	OFF	OFF	OFF							
PORT PUSH TO OPEN	OFF	OFF	OFF	OFF		OFF	OFF	OFF		
PORT PULL TO OPEN	OFF	OFF	OFF	ON		OFF	OFF	OFF		
STBD PUSH TO OPEN	OFF	OFF	OFF		OFF	OFF	OFF	OFF		
STBD PULL TO OPEN	OFF	OFF	OFF		ON	OFF	OFF	OFF		
TURN ON SW 8 ON S2 U	NTIL ALL I			TIVATE SI	ETTING!!			S		
		DIP S2	2							
THROTTLE SETTING TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SELECT THROTTLE DELAY	ON	OFF	OFF							
NO THROTTLE DELAY	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF		
THROTTLE DELAY 0.5 SEC	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF		
THROTTLE DELAY 1.0 SEC	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF		
THROTTLE DELAY 1.5 SEC	ON	OFF	OFF	ON	ON	OFF	OFF	OFF		
TURN ON SW 8 ON S2 U	NTIL ALL I			TIVATE SI	ETTING!!			S		
		DIP S2								
THROTTLE SETTING TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
SYNC LEAD ENGINE SELECTION	OFF	ON	OFF							
PORT IS LEAD ENGINE	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF		
STBD IS LEAD ENGINE	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF		
TURN ON SW 8 ON S2 U	NTIL ALL I	_EDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S		

DIP SWITCH FUNC	TIONS	IN TRO	LL CUS	TOM OF	PTIONS	MODE:					
		DIP S									
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
TROLL SETTINGS:	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF			
		DIP S	2								
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
CONFIGURE FOR TROLL:	OFF	OFF	OFF								
SYSTEM DOES NOT HAVE TROLL	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF			
SYSTEM HAS TROLL	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF			
TURN ON SW 8 ON S2 UN	ITIL ALL L	EDs ARE	LIT TO AC	TIVATE S	ETTING!!			S			
DIP S2											
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
TROLL CABLE DIRECTIONS:	ON	OFF	OFF								
PORT PUSH TO FULL LOCKUP	ON	OFF	OFF	OFF		OFF	OFF	OFF			
PORT PULL TO FULL LOCKUP	ON	OFF	OFF	ON		OFF	OFF	OFF			
STBD PUSH TO FULL LOCKUP	ON	OFF	OFF		OFF	OFF	OFF	OFF			
STBD PULL TO FULL LOCKUP	ON	OFF	OFF		ON	OFF	OFF	OFF			
TURN ON SW 8 ON S2 UN	NTIL ALL L	EDs ARE	LIT TO AC	TIVATE S	ETTING!!	•		S			
		DIP S	2					-			
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
THROTTLE IN TROLL:	OFF	ON	OFF								
NO THROTTLE ON TOP OF TROLL	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF			
THROTTLE ON TOP OF TROLL	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF			
TURN ON SW 8 ON S2 UN	NTIL ALL L			TIVATE S	ETTING!!			S			
		DIP S									
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
GEAR TO TROLL DELAY:	ON	ON	OFF								
NO DELAY	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF			
0.5 SEC	ON	ON	OFF	ON	OFF	OFF	OFF	OFF			
1.0 SEC	ON	ON	OFF	OFF	ON	OFF	OFF	OFF			
1.5 SEC	ON	ON	OFF	ON	ON	OFF	OFF	OFF			
TURN ON SW 8 ON S2 UN	NTIL ALL L			TIVATE S	ETTING!!			S			
		DIP S					1	1			
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8			
TROLL TO GEAR DELAY:	OFF	OFF	ON								
NO DELAY	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF			
0.5 SEC	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF			
1.0 SEC	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF			
1.5 SEC	OFF	OFF	ON	ON	ON	OFF	OFF	OFF			
TURN ON SW 8 ON S2 UN	ITIL ALL L	EDs ARE	LIT TO AC	TIVATE S	ETTING!!			S			
	CONTI	NUED ON	NEXT PAG	E							

Troll Custom Options, p.10 of 16

		DIP S1	1					
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8
TROLL SETTINGS:	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
		DIP S2	2					
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8
TROLL TO THROTTLE DELAY:	ON	OFF	ON					
NO DELAY	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
0.5 SEC	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
1.0 SEC	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
1.5 SEC	ON	OFF	ON	ON	ON	OFF	OFF	OFF
TURN ON SW 8 ON S2 U	NTIL ALL I	LEDs ARE	LIT TO AC	TIVATE SE	ETTING!!	-		S
		DIP S2	2					
TROLL OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8
THROTTLE TO TROLL DELAY:	OFF	ON	ON					
NO DELAY	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
0.5 SEC	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
1.0 SEC	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
1.5 SEC	OFF	ON	ON	ON	ON	OFF	OFF	OFF
TURN ON SW 8 ON S2 U	NTIL ALL I	LEDs ARE	LIT TO AC	TIVATE SE	ETTING!!			S

DIP SWITCH FUNCTIONS IN	THROT	TLE / TI	ROLL B	UMP CI	JSTOM	OPTION	NS MOD	E:		
		DIP S1								
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8		
THROTTLE/TROLL BUMP SETTINGS:	OFF	ON	OFF	ON	OFF	ON	OFF	OFF		
DIP S2										
BUMP SELECTION:	1	2	3	4	5	6	7	8		
NUMBER OF BUMPS (UP/DN):	OFF	OFF	OFF							
10 BUMPS	OFF	OFF	OFF	ON	OFF	OFF	OFF			
20 BUMPS	OFF	OFF	OFF	OFF	ON	OFF	OFF			
30 BUMPS	OFF	OFF	OFF	OFF	OFF	ON	OFF			
40 BUMPS	OFF	OFF	OFF	OFF	OFF	OFF	ON			
TURN ON SW 8 ON S2 U	NTIL ALL L	EDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S		
SIZE OF EACH BUMP:	ON	OFF	OFF							
5 (.5%)	ON	OFF	OFF	ON	OFF	OFF	OFF			
10 (1%)	ON	OFF	OFF	OFF	ON	OFF	OFF			
15 (1.5%)	ON	OFF	OFF	OFF	OFF	ON	OFF			
20 (2%)	ON	OFF	OFF	OFF	OFF	OFF	ON			
TURN ON SW 8 ON S2 U	NTIL ALL L	EDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S		

DIP SWITCH FUNCT	IONS IN	HIGH I	DI F CU	ISTOM (OPTION	S MODI	: .	
		DIP S			J. 11 3 10			
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8
HI IDLE SETTINGS:	OFF	ON	OFF	ON	ON	ON	OFF	OFF
		DIP S	2					
HI IDLE STEP TO MODIFY (S2, SW 1-3):	1	2	3	4	5	6	7	8
SELECT ALL 7 HI IDLE STEPS	OFF	OFF	OFF					
HI IDLE STEP 1	ON	OFF	OFF					
HI IDLE STEP 2	OFF	ON	OFF					
HI IDLE STEP 3	ON	ON	OFF					
HI IDLE STEP 4	OFF	OFF	ON					
HI IDLE STEP 5	ON	OFF	ON					
HI IDLE STEP 6	OFF	ON	ON					
HI IDLE STEP 7	ON	ON	ON					
SIZE OF EACH HI IDLE STEP(S2, SW 4-7):	1	2	3	4	5	6	7	8
0% OF THROTTLE RANGE				OFF	OFF	OFF	OFF	OFF
0.5% OF THROTTLE RANGE				ON	OFF	OFF	OFF	OFF
1% OF THROTTLE RANGE				OFF	ON	OFF	OFF	OFF
2% OF THROTTLE RANGE				ON	ON	OFF	OFF	OFF
3% OF THROTTLE RANGE				OFF	OFF	ON	OFF	OFF
4% OF THROTTLE RANGE				ON	OFF	ON	OFF	OFF
5% OF THROTTLE RANGE				OFF	ON	ON	OFF	OFF
6% OF THROTTLE RANGE				ON	ON	ON	OFF	OFF
8% OF THROTTLE RANGE				OFF	OFF	OFF	ON	OFF
10% OF THROTTLE RANGE				ON	OFF	OFF	ON	OFF
15% OF THROTTLE RANGE				OFF	ON	OFF	ON	OFF
20% OF THROTTLE RANGE				ON	ON	OFF	ON	OFF
25% OF THROTTLE RANGE				OFF	OFF	ON	ON	OFF
30% OF THROTTLE RANGE				ON	OFF	ON	ON	OFF
40% OF THROTTLE RANGE				OFF	ON	ON	ON	OFF
50% OF THROTTLE RANGE				ON	ON	ON	ON	OFF
TURN ON SW 8 ON S2 U	NTIL ALL I	LEDs ARE	LIT TO AC	TIVATE SI	ETTING!!			S

DIP SWITCH FUNCTIONS IN STARTUP CUSTOM OPTIONS MODE:									
DIP S1									
OPTION TO CUSTOMIZE:	1	2	3	4	5	6	7	8	
STARTUP SETTINGS:	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	
DIP S2									
STARTUP SELECTION:	1	2	3	4	5	6	7	8	
STARTUP MODE:	OFF	OFF	OFF						
SYSTEM WILL START UP IN NORMAL RUN	OFF								
SYSTEM WILL START UP IN WARM MODE	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	
TURN ON SW 8 ON S2 UNTIL ALL LEDS ARE LIT TO ACTIVATE SETTING!!								S	

DIP SWITCH FUNCTIONS IN CP TROUBLE SHOOT MODE:									
TROUBLE SHOOT 16 MOST RECENT ALARMS									
		DIP S1			1		,		
TROUBLE SHOOT OPTION:	1	2	3	4	5	6	7	8	
16 MOST RECENT ALARMS	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	
DIP \$2									
TROUBLE SHOOT OPTION:	1	2	3	4	5	6	7	8	
DISPLAY ALARM COUNT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
DISPLAY ALARMS (STARTING WITH MOST RECENT)	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
DISPLAY NEXT PREVIOUS ALARM TOGGLE SWITCH 2 ON S2 ON AND OFF.									
DELETE ALARMS	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	
NOTE: LEDS WILL SCROLL AFTER ALL THE ALARMS HAVE BEEN DELETED.									
TROUBLE SHOOT SPECIFIC ALARM COUNT									
DIP S1									
TROUBLE SHOOT OPTION:	1	2	3	4	5	6	7	8	
SPECIFIC ALARM COUNT	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	
DIP S2									
	1	2	3	4	5	6	7	8	
DISPLAY COUNT FOR SPECIFIC ALARM CODE	E		CIFIC ALAI	RM/WARN	_	-	VITCHES 1	-8.	
DISPLAY COUNT FOR SPECIFIC ALARM CODE ENTER SPECIFIC ALARM/WARNING CODE ON S2 SWITCHES 1-8.									
DELETE ALL SPECIFIC ALARM COUNTS									
DIP S1									
TROUBLE SHOOT OPTION:	1	2	3	4	5	6	7	8	
DEL COUNT FOR ALL SPECIFIC ALARMS	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	
NOTE: LEDS WILL SCROLL AFTER COUNT FOR ALL SPECIFIC ALARMS HAVE BEEN DELETED.									

HANDLE SWITCH FUNCTIONS IN HANDLE TROUBLE SHOOT MODE:

TO ENTER HANDLE TROUBLE SHOOT:

- 1. MOVE HANDLES OUT OF NEUTRAL.
- POWER UP THE SYSTEM.
- PRESS THE TWO OUTER BUTTONS ON THE HANDLE.

AFTER ENTERING HANDLE TROUBLE SHOOT, THE FOLLOWING OPTIONS ARE AVAILABLE:

1. THE CONTROL HANDLE WILL AUTOMATICALLY SHOW THE ALARM COUNT WHEN ENTERING:

- A. BUZZER WILL BEEP AT A 4HZ RATE WHILE DISPLAYING THE 4MSBs OF THE ALARM COUNT.
- B. BUZZER WILL BEEP AT A 1HZ RATE WHILE DISPLAYING THE 4LSBs OF THE ALARM COUNT.
- IT WILL KEEP ALTERNATING BETWEEN A AND B UNTIL THE FOLLOWING BUTTON IS PRESSED:
- LEFT-MOST BUTTON: THE SYSTEM WILL ENTER ALARM DISPLAY STATE.

2. ALARM DISPLAY STATE:

- A. THE BUZZER WILL BEEP AT A 4HZ RATE WHILE DISPLAYING THE 4MSBs OF THE ALARM CODE.
- B. THE BUZZER WILL BEEP AT A 1HZ RATE WHILE DISPLAYING THE 4LSBs OF THE ALARM CODE.
- IT WILL KEEP ALTERNATING BETWEEN A AND B UNTIL THE FOLLOWING BUTTONS ARE PRESSED:
- 1. LEFT-MOST BUTTON: THE SYSTEM WILL RETRIEVE THE NEXT PREVIOUS ALARM AND REPEAT A AND B.
- 2. TWO RIGHT-MOST BUTTONS: THE SYSTEM WILL ENTER DELETE ALARMS STATE:

3. DELETE ALARMS STATE:

A: ALL THE LEDS WILL FLASH WHEN THE ALARMS ARE DELETED (NO BUZZER).

THE SYSTEM WILL RE-ENTER HANDLE TROUBLE SHOOT MODE IF THE LEFT-MOST BUTTON IS PRESSED.



nbs08 dips 4-12-04A REVISION TRACKING & SIGNATURE PAGE

R	EVISIONS	ECN#	CHANGES	By	DATE
	1	2279Pn	Initial release	BL	03-15-05

Owner:	Date:
Management Representative:	Date: